


23801 E. La Palma Ave., Yorba Linda, CA 92887 Ph. 714.692.8180 Fax. 714.692.5016

www.cobrausa-vtwin.com

1 - I	RONT HEATSHIELD REAR HEATSHIELD CLAMP, HS-24	HARLEY: SPORTSTER 883 IRON SPORTSTER 883 SUPERLOW SPORTSTER 1200 CUSTOM SPORTSTER 1200 SUPERLOW SPORTSTER 1200 FORTY EIGHT SPORTSTER ROADSTER	14-20 14-20 14-20 14-20 14-20 16-20
Ins	truction Manual >	6031HSRB	Page 1 of 1
-	Read all instructions carefully and comp	letely before installing your new heatshie	elds!
1.	Read all instructions carefully and comp Remove the stock heatshields from the headpipes. heatshields.		
1. 2.	Remove the stock heatshields from the headpipes.	If using stock mufflers do not remove stock muffle ail end of the clamp through the clips on the inside of the clamps on the heatshields. (NOTE: The arro nex head of the clamps should be accessible for ti	er e of the new ows point to
	Remove the stock heatshields from the headpipes. heatshields. Unscrew the supplied HS-24 clamps and feed the t heatshields. See FIGURE 1 for proper positioning of the positioning of the hex head of the clamps. The l	If using stock mufflers do not remove stock muffle ail end of the clamp through the clips on the inside of the clamps on the heatshields. (NOTE: The arro nex head of the clamps should be accessible for ti res.) clamps apart slightly to make it easier to slide the interfere with the heatshield and that the rear of the	er e of the new ows point to ightening but m over the
2.	Remove the stock heatshields from the headpipes. heatshields. Unscrew the supplied HS-24 clamps and feed the t heatshields. See FIGURE 1 for proper positioning of the positioning of the hex head of the clamps. The l not visible when heatshields are mounted to the pip Install the front heatshield first. (NOTE: Spread the headpipes.) Make sure the muffler clamp does not	If using stock mufflers do not remove stock muffle ail end of the clamp through the clips on the inside of the clamps on the heatshields. (NOTE: The arro nex head of the clamps should be accessible for ti- tes.) clamps apart slightly to make it easier to slide the interfere with the heatshield and that the rear of the ne heatshield clamps but do not tighten.	er e of the new ows point to ightening but m over the
2. 3.	Remove the stock heatshields from the headpipes. heatshields. Unscrew the supplied HS-24 clamps and feed the the heatshields. See FIGURE 1 for proper positioning of the positioning of the hex head of the clamps. The not visible when heatshields are mounted to the pip Install the front heatshield first. (NOTE: Spread the headpipes.) Make sure the muffler clamp does not goes on top of the stock muffler heatshield. Snug the	If using stock mufflers do not remove stock muffle ail end of the clamp through the clips on the inside of the clamps on the heatshields. (NOTE: The arro- nex head of the clamps should be accessible for ti- bes.) clamps apart slightly to make it easier to slide the interfere with the heatshield and that the rear of the heatshield clamps but do not tighten. t heatshield. See FIGURE 1 .	er e of the new ows point to ightening but m over the he heatshield

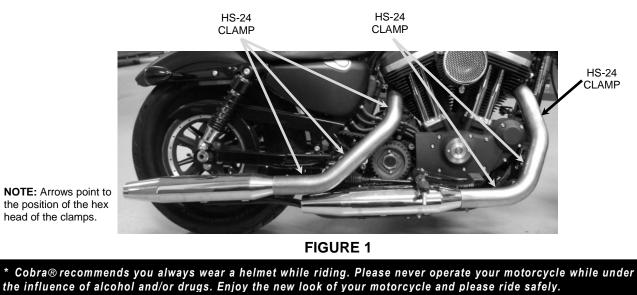

DOCUMENT NO. 0017

REV. A