

### Items Supplied >

- 1 – FREEWAY BAR
- 2 – BOLT, BUTTONHEAD 3/8"-16 X 1"
- 1 – BOLT, BUTTONHEAD 5/16"-18 X 1"

### Application(s) >

HARLEY  
DRESSER 2009-2020

### Instruction Manual >


601-2203

Page 1 of 1

**Read all instructions carefully before installing your new Cobra® product!**

1. Remove the stock freeway bar and discard the hardware.
2. Carefully rotate the Cobra® freeway bar into position between the frame down-tubes and front tire. **NOTE:** Make sure not to capture or pinch the clutch cable with the freeway bar. Position the freeway bar's upper mount behind the down-tube frame brace. Align the holes in the freeway bar's lower mounts with the threaded bosses on the frame tubes. See Figure 1.
3. Insert the (2) supplied 3/8"-16 x 1" buttonhead bolts thru the freeway bar's lower mounts and thread into the bosses mentioned in Step 2; See Figure 1 and 2. **DO NOT FULLY TIGHTEN.**
4. Secure the upper portion of the freeway bar by inserting the supplied 5/16"-18 x 1" buttonhead bolt thru the down-tube frame brace and thread into the freeway bar's upper mount. **DO NOT FULLY TIGHTEN.**
5. Make sure freeway bar is aligned properly then fully tighten the 5/16"-18" bolt followed by the (2) 3/8"-16 bolts.


RIGHT SIDE FRAME DOWN TUBE

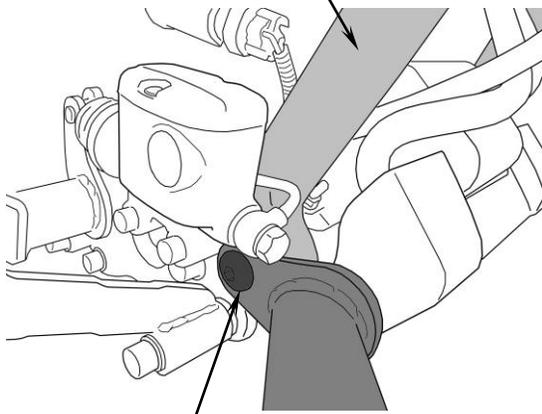

2X SUPPLIED 3/8"-16 X 1"  
BUTTONHEAD BOLT

**FIGURE 1**

(RIGHT SIDE SHOWN)

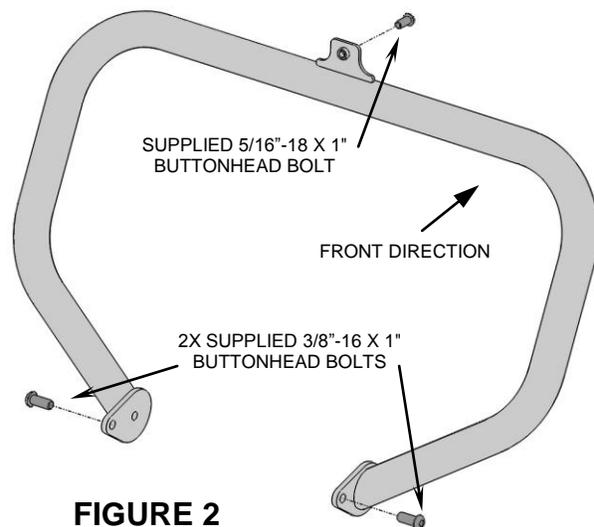

SUPPLIED 5/16"-18 X 1"  
BUTTONHEAD BOLT

FRONT DIRECTION

2X SUPPLIED 3/8"-16 X 1"  
BUTTONHEAD BOLTS

**FIGURE 2**

**Cobra Freeway Bars add style to your motorcycle. They are not designed to withstand a serious impact and may not protect you and/or your motorcycle in the event of a crash.**

**\*Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.**