

23801 E. La Palma Ave., Yorba Linda, CA 92887 Ph. 714.692.8180 Fax. 714.692.5016

www.cobrausa-vtwin.com

Items Supplied >

- 1 Sissy Bar w/ Pad
- 2 Mount Brackets (Left/Right)
- 6 3/8-16 x 11/4 Buttonhead Bolts
- 6 Spacers
- 4 M8 x 16mm Buttonhead Bolts

Application(s) >

HARLEY SOFTAIL DELUXE

FLSTC 2000 - 2017 FLSTN 2007 - 2017 FLSTS 2000 - 2003


Instruction Manual >

602-1104B / 602-1154B / 602-1204B

Page 1 of 1

Read all instructions carefully before installing your new Cobra® product!

- 1. Remove and discard the (3) 3/8 bolts/washers from the right side fender rail. Do NOT loosen left side at this time. Do NOT remove the chrome fender rail.
- 2. Install right sissy bar mounting bracket (part # facing inward) by inserting (3) supplied 3/8-16 x 1½ buttonhead bolts through the sissy bar mount bracket, supplied spacers, chrome fender rail and into the fender nut plates. **DO NOT TIGHTEN AT THIS TIME.**
- 3. Repeat Steps 1 & 2 on left side.
- 4. Install the sissy bar between the brackets using the four (4) supplied M8 x 16mm button head bolts.
- 5. Align sissy bar and tighten all bolts securely.

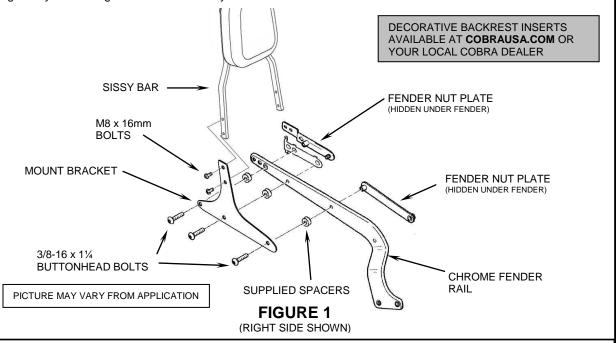

To clean your black accessory use a liquid based soap detergent, such as dishwashing soap applied with a soft cloth and rinse with clean water. Note: Avoid abrasive cleaning methods such as granular or dry cleansers, simple green, Scotch-Brite or steel wool pads. Abrasives may breach the coating and shorten life.

^{*} Cobra® recommends you always wear a helmet while riding. Please never operate your motorcycle while under the influence of alcohol and/or drugs. Enjoy the new look of your motorcycle and please ride safely.